



MOTOROLA

User's Guide

TALKABOUT™ WORD MESSAGE PAGER



Model T350
FLEX™ Technology

Contents



Getting Started

Installing the Battery	2
Controls	3
Turning On Your Pager	4
Standby Screen	4
Menu Screens	5
Turning Off Your Pager	7
Sending a Test Page	8
Backlight	9



Time and Date

Setting the Time and Date	10
---------------------------------	----



Alerts

About Alerts	11
Setting the Incoming Message Alert	12
Choosing an Audible (Musical) Alert	13
Private Time	14



Alarms

Setting the Alarm	16
Using a Daily Alarm	17
Turning Off the Alarm	17



Scrolling

Setting the Scroll Speed	18
Reverse Scrolling	19



Personal Messages

Reading Personal Messages	20
Storing Personal Messages	21
Locking Personal Messages	22
Unlocking Personal Messages	23
Duplicate Messages	24
Reading Duplicate Messages	25



Information Services

About Information Services	26
Reading Information Services	27
Turning the Information Service Alert On and Off	28
Turning the Chirp Alert Off	29



Advanced Messaging

Scanning Messages	30
Deleting a Single Message	31
Deleting All Messages	32
Automatic Message Deletion	33
Setting Message Alarms	34
Turning Off the Message Alarm	35
QuickNotes	36
Message Error Symbols	38



Use and Care..... 39

Getting Started



Hi, I'm QuickStart and I'm going to help you get started.

The Motorola[®] TalkAbout[™] T350 Word Message Pager has lots of cool features -- advanced messaging, time-keeping, news updates, alarms and much more. It's compact and easy to carry.




It can save you money, too. If you have a cell phone, give out your pager number instead of your phone number. That way, you can decide which calls to take and not pay for unwelcome phone calls.

Learning to use the pager is easy, if you read this user's guide.

A detachable Quick Reference Card is on the back cover.

 
The TalkAbout T350 is a great pager. I oughta know ... some of my best friends are pagers!

Installing the Battery

The TalkAbout T350 Word Message Pager uses one AAA-size alkaline battery. When the battery is low,  appears between the time and date on the standby screen.


To install the battery do the following:

First




- Turn off the pager (see page 7).
- Slide door as marked and lift open.

 Then

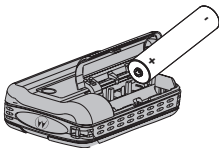


- Remove old battery, if necessary.
- Insert new battery so the + and - markings match the ones in the battery compartment.

 Finally

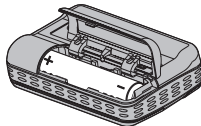

- Close battery door.
- Slide it shut.

 Controls

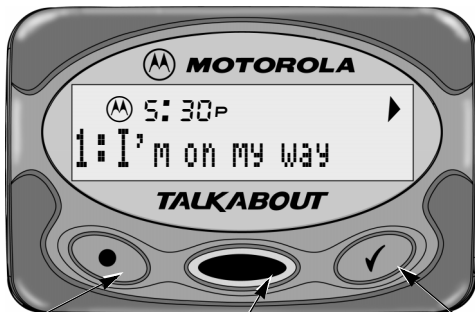

Use  to --

- Move through menu choices
- Change a number



Use  to --

- Turn on the pager
- Read a message
- Save a setting
- Turn on the backlight
- Exit a menu

Use  to --

- Enter a menu
- Select a choice

Turning On Your Pager

Press	To Display	Then Press
	 Note: Your pager emits the selected alert.	Any button to stop the alert

Standby Screen

 


Your pager displays the standby screen whenever it is turned on and nothing else is happening.

Most of the actions described in this guide start on the standby screen.

Remember this, it's very important!

 
Standby Screen

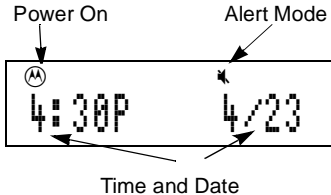









Menu Screens



You can use your pager's menus to select options and set its features. Let's look at them now. **From --.**








Press	To Display	Then Press
 to go to the first menu		
 and release until you see all the menus	  	 to enter any menu

Continued on next page ...






... continued from previous page

Press	To Display	Then Press
 and release until you see all the menus	 OFF?	 to enter any menu
	 TIME/DATE?	
	 PRIVATE TIME?	

Note: DELETE ALL appears only if the pager has messages.



 
Press  if you want to go back to the standby screen.



Turning Off Your Pager




From --





Press

To Display

Then Press

  until OFF?
appears



The pager is now turned off. No icons appear on the off screen, except  if the alarm is turned on.



The off screen looks like this.

Off Screen





Sending a Test Page to Yourself



It's a good idea to test your pager and service by sending a page to yourself.

Start by using the phone number, web site or email address (and a PIN, if required) your service provider gave you, then enter a short message.

If you are sending a word message from a phone, an operator will assist you; otherwise, press the phone buttons to enter a numeric message or type a message and send it.

While you are waiting for the message to reach your pager, refer to page 20 for more information about how to read a message. If your pager does not receive the message within a few minutes, contact your service provider.



After you receive the test page, you don't have to call yourself back -- unless you really want to.

 




Backlight

Being in the dark is never a problem with the TalkAbout T350 Word Message Pager.

Just turn on the backlight by pressing  for 2 seconds. The backlight turns off automatically or you can turn it off by pressing  again for 2 seconds.

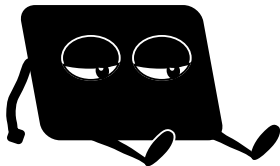

You light up my pager ...

 




Time and Date



From --



TIME AND DATE

Press	To Display	Then Press
until TIME/DATE? appears	TIME/DATE?	
to set the hour <i>Pressing and holding scrolls through numbers quickly.</i>	9:00AM 1/01	to move to the next field
and to set the minutes, AM/PM, the 12/24 hour clock setting, the month, and the day	9:35AM 3/24	to save the setting



Alerts

About Alerts

You can choose how your pager alerts you when it receives a message.



 
VIBRATE -- your pager vibrates but doesn't make any loud noises.



AUDIBLE -- your pager plays a short musical tune.



CHIRP -- your pager emits a short beep.

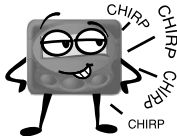

ESCALERTTM -- an alert that gets louder and louder.



NO ALERT -- your pager doesn't alert you when it receives a message.



 
Note: If you choose **NO ALERT** or **VIBRATE**, your pager still makes a sound when it receives a priority message.



Setting the Incoming Message Alert




From --




Press

To Display

Then Press

 until **ALERTS**
appears



 until your choice
of alert appears



 to set the alert

Note: The pager
makes a sample of
each alert.



To set one of
the musical
alerts, see
"Choosing an
Audible (Musical) Alert"



Note: After you select
an alert, the
corresponding icon
appears on the standby
screen.

 


Choosing an Audible (Musical) Alert



You've got 8 musical alerts to choose from and they're all very cooooool!

From --



Press	To Display	Then Press
until ALERTS? appears		
until AUDIBLE? appears		
until your choice of alert appears		to set the audible alert

Note: now appears on the standby screen.

 


Private Time




When you don't want to be disturbed, use private time to turn off all your alerts.

Private time works on a daily basis. That means your pager will turn off the alerts during the same time each day.

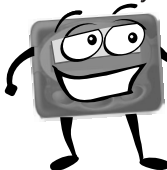

 After private time expires, the alerts turn back on automatically.

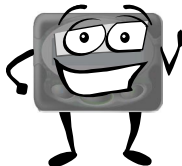

Here's how to turn on private time.

From --






Press	To Display	Then Press
until PRIVATE TIME? appears	 PRIVATE TIME?	
to turn private time on or off Note: C appears around if private time is turned on.	 1:52P/ 1:52P	
to set the start time hour	 9:52P/ 1:52P	to move to next field
and to set the start time minutes and AM/ PM, and the stop time hour, minutes and AM/PM	 9:30P/ 11:00P	to save setting
Important: Make sure private time is turned on by checking for C on the standby screen.	 10:30P 4/23	Indicates Private Time Turned On



Alarms



 Your pager has 3 alarms to remind you of special times. My favorite is meal time! Here's how it works. **From --**



Press	To Display	Then Press
until ALARMS? appears		
to select alarm 01, 02, or 03		
to turn the alarm on or off		
to adjust the hour		to move to the next field
and to set the minutes, AM/PM, month, and day		to save Note: now appears on the standby screen.



Using a Daily Alarm

To set an alarm to sound at the same time everyday, set the month and day like this.



Turning Off the Alarm

*When an alarm sounds, **TURN IT OFF** by pressing any button.*

Press the button again to clear the alarm screen.



Alarm Setting Screen



Month and Day

Alarm Screen

 flashes



ALARM and number appear on screen



Scrolling

Setting the Scroll Speed

Your pager can
display messages
Line-by-Line.



And scroll really fast
-- that's Scroll 3.



It can scroll
messages slowly --
that's Scroll 1.



It can even go
backward and scroll
in reverse.



It can scroll a little
faster --
that's Scroll 2.












Here's how to set
the forward scroll
speed.

From --






Press	To Display	Then Press
 until SCROLL SPEED? appears	 SCROLL SPEED?	
 and release until your scrolling choice appears	 LINE-BY-LINE	 to select scroll speed
Note: Your pager displays the scroll speed of each selection.	 SCROLL 1	
	 SCROLL 2	
	 SCROLL 3	

Reverse Scrolling



While reading a message, press and release  to change the direction of the scrolling.

 


Personal Messages

Reading Personal Messages



From --




Press	To Display	Then Press
		until the message () is highlighted ()
to read the message	 Note: Rest of message appears automatically.	then to exit Note: You can also let the pager exit automatically.



► indicates the message continues on another screen. To stop the scrolling, press . Press it again to resume scrolling.



 Storing Personal Messages

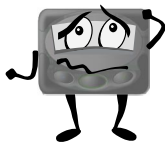


*Wow, first you're wondering if you'll **EVER** receive any messages. Then, they start coming in fast and furious. Before you know it, you have so many messages you can't read each one as soon as it arrives.*

Don't worry. Your new pager will help you keep everything straight.



 
Your pager can store up to 16 personal messages. Each stored message is assigned a number, which appears when the message is read. The first message received is 1, the second is 2 and so on.

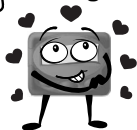Locking Personal Messages



Some personal messages are **VERY SPECIAL**. Save special messages by locking them. That way your pager won't erase them to make room for new ones. Here's how.

While reading a personal message --


Press	To Display	Then Press
		 to lock the message

Note: You can lock a message only while reading it.

Your message status screen now looks like this.



 Message Status Screen



Indicates locked message status

Unlocking Personal Messages



When that special message is no longer special, unlock it. Here's how to do it.

While reading a locked message --

Press	To Display	Then Press
		 to unlock the message

Note: You can unlock a message only while reading it.



You can lock up to half of your personal messages. However, after your pager's limit is reached, you must unlock one message before you can lock another one.





Duplicate Messages

 
Oh, no! Where did that other pager come from?! Looks just like me.




Seriously, you may receive duplicate messages from time to time.

Your new pager identifies duplicate messages for you in two ways.

Your message status screen displays Δ whenever a duplicate message is received. It looks like this.

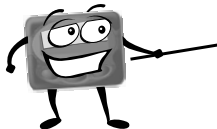

Message Status Screen

 


Indicates duplicate message




Reading Duplicate Messages

 When you view a duplicate message, your pager lets you know.

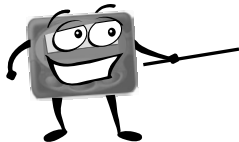

Duplicate Message Screen

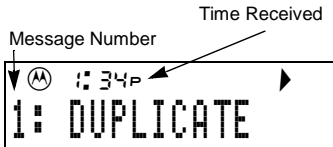 

DUPLICATE appears before
message



Information Services

About Information Services

When you're always on the go, it's hard to keep up with the latest news. But not if your



pager receives information service messages.

They feature daily headlines, sports scores, financial news,



and entertainment stories.

Information service messages are news updates sent to your pager

 


by your service provider.


Your pager doesn't control what it receives or the schedule. Contact your service provider for details.



Reading Information Services

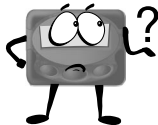

 
The news can be confusing. Reading information services is not. Here's how. **From --**




Press	To Display	Then Press
		until is highlighted
		until the message is highlighted
to read the message		then to exit





► indicates the message continues on another screen. To pause the scrolling, press . Press it again to resume scrolling.

 Turning the Information Service Alert On and Off

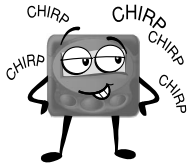


You can set a chirp alert for each information service. This way, whenever you receive an information service message, your pager lets you know by chirping. Here's how it works.

While reading an information service message --


Press	To Display	Then Press
 until CHIRP ON appears	 CHIRP ON?	 to turn chirp on



Your information services message screen now displays  for that message slot.



 Information Service Message Screen



Indicates Chirp On


Turning the Chirp Alert Off



Turning off the chirp alert is easy.

While reading an information service message --

Press	To Display	Then Press
 until CHIRP OFF appears	 CHIRP OFF?	 to turn chirp off

Note: The information service message screen no longer displays .



Advanced Messaging




Scanning Messages

By now, you probably have so many messages you don't have time to read them all.




It's a good thing your pager lets you scan your messages so you can concentrate on the important ones. Here's how it works.

While reading the first screen of a message --

Press	To Display	Then
Press  and hold to read the first screen of each message	 Note: The first screen of each stored message appears.	Release  if you wish to read a specific message entirely



 Deleting a Single Message

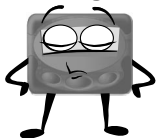

Sometimes the best thing to do with a message is delete it. You can delete messages one at a time or all at once.

Here's how to delete a single message.

While reading the message --

Press	To Display	Then Press
 until DELETE? appears	 DELETE?	

Note: You can delete a message only while reading it. For information on how to read messages, see “Reading Personal Messages” on page 20.

 







Deleting All Messages

Sometimes you just need to clean house. **DELETE ALL** erases all read and unlocked messages. Locked or unread messages are not deleted. Here's how it works.



From --



Press	To Display	Then Press
 until DELETE ALL? appears		
		 to delete



Automatic Message Deletion

Your pager has room for 16 messages.

When its message slots fill



*up, the pager
displays this on
the standby screen.*

*If the memory is full when a new message arrives, your pager deletes the oldest, **unlocked and read** message. If all the messages are unread, your pager deletes the **oldest unread message** and displays this on the message status screen.*



This happens automatically. Your pager does all the work.

Memory Full Screen



Unread Message Deleted Screen





Setting Message Alarms




You can set an alarm to remind you to read a message at a certain time. Here's how.

While reading a message --


Press	To Display	Then Press
until ALARMS? appears	ALARMS?	
to turn the alarm on or off	12:35P 4/23	
to adjust the hour	7:35P 4/23	to move to the next field
and to set the minutes, AM/PM, month, and day	7:30A 4/24	to save setting



  Your message screen now looks like this.

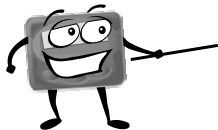



Message Screen




Indicates message alarm turned on

Turning Off the Message Alarm



When the alarm sounds, press  to stop it. Press  again to read the message.

If you do not turn off the alarm and read the message,  flashes until you do.

 


QuickNotes

QuickNotes are coded messages that are fun to use.

Each QuickNote is assigned a certain code. When the person paging you enters one of the codes, the corresponding QuickNote appears on your message screen.

*For example: Entering code ****01**** displays Running Late on your message screen.*

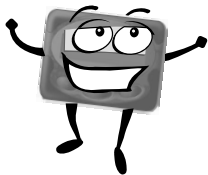

QuickNotes can also be used as part of a message.

*For example: Entering ****08**9** displays Meet you at 9 on the message screen.*

There are 10 QuickNotes stored in your pager. They are listed on the next page. Give a copy to those who page you frequently.

Note: QuickNotes are subject to change. Contact your service provider for additional details and to verify the QuickNote list.



When the person paging
you enters this code ...

... this appears on the message
screen.

****01****

Running late

****02****

I'm on my way

****03****

Pick me up

****04****

I'm home

****05****

Come home

****06****

Call home

****07****

Where are you

****08****

Meet you at

****09****

I love you

****10****

I miss you



Message Error Symbols



Whenever your pager receives a message with errors, your pager will display the message with ■ over the characters that are incorrect.

 
When a message is too long, the pager shortens it and displays †.

When part of a message is missing, the pager displays <...> instead of the missing fragment.


Incorrect Characters



Shortened Message



Fragmented Message

 

Use and Care



Clean with a soft cloth dampened with soap and water.



Do not immerse in water.



Do not use alcohol or other cleaning solutions.



Do not expose to excessive heat ...



... or extreme shock ...



... or moisture.

**Repairs**

1-800-548-9954 (U.S.)
1-800-793-7834 (TTY-U.S.)
1-800-323-9685 (Canada)

**Extended Warranty**

 
1-800-548-9954
(also your paging provider or
retailer)

**Questions**

1-800-548-9954 (U.S.)
1-800-793-7834 (TTY-U.S.)
www.motorola.com

Well, there you have it. The TalkAbout T350 Word Message Pager is a messenger, a watch, a news service, and whole lot more.

All that great stuff packed into an attractive, compact design ... just like me.

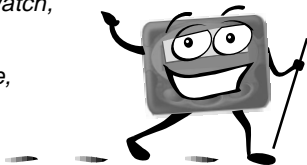

Patent Information

This pager is manufactured under one or more Motorola U.S. Patents. A partial listing of these patents is provided on the inside surface of the battery door. Other patents covering this product are pending.

Note: Only the first 15 patents listed below apply to pager models which utilize the POCSAG protocol.

- | | | |
|-------------|-------------|-------------|
| 1. 4336524 | 13. 5247519 | 25. 5450071 |
| 2. 4385295 | 14. 5073767 | |
| 3. 4412217 | 15. 5157391 | |
| 4. 4518961 | 16. 5128665 | |
| 5. 4701759 | 17. 5117500 | |
| 6. 4755816 | 18. 5168493 | |
| 7. 4829466 | 19. 5051993 | |
| 8. 4839628 | 20. 5311516 | |
| 9. 4851829 | 21. 5325088 | |
| 10. 5381138 | 22. 5371737 | |
| 11. 4893271 | 23. 4860003 | |
| 12. 4910510 | 24. 5414419 | |

FCC Compliance

This device complies with part 15 of the FCC Rules Operation and is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warranty

ONE (1) YEAR STANDARD LIMITED WARRANTY AND PROVISIONS (U.S.A. ONLY)

Motorola warrants the pager against defects in material and workmanship under normal use and service for the period of time specified below. This express warranty is extended by Motorola, 1500 Gateway Blvd., Boynton Beach, Florida 33426 to the original end user purchaser only and is not assignable or transferable to any other party.

This warranty sets forth the full extent of MOTOROLA's responsibilities regarding the pager. Repair, replacement, or refund of the purchase price, at MOTOROLA's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY IS LIMITED TO THE DURATION CHOSEN. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE MOTOROLA PAGER, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

Motorola pagers are shipped from the factory with a standard limited warranty of one (1) year on parts and labor from date of purchase by the original end user purchaser, based on proof of purchase. In the event of a defect, malfunction, or failure to conform to specifications during the warranty period, Motorola, at its option, will either repair, replace or refund the purchase price of the pager. Repair, at Motorola's option, may include the replacement of parts or boards with functionally equivalent reconditioned or new parts or boards. (continued)

LIMITED WARRANTY AND PROVISIONS (U.S.A.) continued

Replaced parts and boards are warranted for the balance of the original warranty period. All parts and boards removed in the replacement process shall become the property of Motorola.

This warranty does not cover defects, malfunctions, performance failures or damages to the unit resulting from use in other than its normal and customary manner, misuse, accident or neglect, the use of non-conforming parts, or improper alterations or repairs. This warranty does not cover wear and tear on covers or housings, nor the coverage or range over which the pager will receive signals.

For information on how to receive service on Motorola pagers or covered accessories, call 1-800-548-9954 or 1-800-793-7834 (TTY).

Pager warranty will be VOID if any of the following conditions occur:

- Pagers that are incomplete such as those in which boards or components are missing and/or incompatible.
- Pagers whose serial numbers do not match on the boards, or pagers in which the board serial numbers don't match the housing.
- Pagers that have been opened by, or had work performed by, anyone other than a Motorola authorized pager service center.
- Pagers received with non-conforming or non-Motorola housings or parts.
- Flat rate repair fees apply to pagers and accessories not covered under warranty.

STATE LAWS

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, THEREFORE THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Personal Numbers



Just one more thing. You can use this page to keep track of important numbers.

Service Provider


















Family and Friends
















Pager Number and PIN

Pager Number and PIN

TalkAbout T350 Word Message Pager

Quick Reference Card

	On		Locked message
	Private Time on		Out of range
	Message, selected		Message continuation
	Message, unselected		Low-battery
	Delete All		Information service menu
	Audible alert		Information service menu, selected
	Chirp alert		Information service message, selected
	Vibrate alert		
	Alarm turned on		
	Alarm turned off		

	Information service message, unselected		Duplicate message, unselected
	Chirp on, selected		Duplicate message, selected
	Chirp on, unselected		Twenty-four hour clock
	Locked message, selected		Twelve hour clock
	Locked message, unselected		Truncated message
	Message alarm on, selected		Errored characters
	Message alarm on, unselected		Missing message fragment
			Daily alarm setting

Setting the Time and Date





 


 



 

From --

Ⓜ
4:30 P 4/23

Press	To Display	Then Press
● until TIME/DATE? appears	Ⓜ TIME/DATE?	/
● to set the hour	Ⓜ 9:00A 1/01	/ to move to the next field
● and / to set the minutes, AM/PM, the 12/24 hour clock setting, the month, and the day	Ⓜ 9:35A 3/24	Ⓜ to save the setting

Setting the Alarm

From the standby screen --

Press	To Display	Then Press
 until ALARMS? appears		
 to select alarm 01, 02, or 03		
 to turn the alarm on 0 or off 0		
 and  to set the hour, the minutes, AM/PM, the month, and the day		 to save Note: 0 now appears on the standby screen.

 


Ⓜ, Motorola, TalkAbout, FLEX, and Escalart are trademarks or registered trademarks of Motorola, Inc.

Reg. U.S. Pat. & Tm. Off.

© 1999 by Motorola, Inc. All Rights Reserved.

Personal Communications Sector
1500 Gateway Blvd., Boynton Beach, FL 33426-8292
Printed in U.S.A. 12/99



6881034B80-O

TalkAbout T350 All Models



Tested To Comply
With FCC Standards

FOR HOME OR OFFICE USE